



## DESCRIPTION AND APPLICATION

The sensors of the serie SD 11x are intelligent microprocessor-controlled temperature sensors. SD 11x outdoor sensors are intended for temperature measurement in industrial areas or outdoors. The standard temperature range in which the sensors are allowed to be utilised is -30 to +70 °C. The sensors communicate by means of RS 485 bus and only the bus can control the sensors. Communication inputs are protected to overvoltage. In case the module is placed as terminal on the line, a terminating resistor can be attached to the wiring by shorting the contacts (the switch SW placed next to terminals for communication lines connection). All settings are stored in EEPROM memory. The electronic module is equipped with the WATCHDOG circuit, which safeguards proper program functioning in the microprocessor. Easy mounting of the temperature sensor is ensured by the unique “S head” design.

The sensors are designed to be operated in a chemically non-aggressive environment. The sensors are made in three basic variants:

- SD 110** – with a simple ASCII communication protocol corresponds with ADAM 4000 modules by ADVANTECH company. Thus, standard drivers for ADAM modules can be used in various control programmes. For easier operation, the green LED indicates if power supply is on and the red LED indicates that the module is communicating, the SD 1x0 module is provided by the INIT shorting jumper on its printed circuit board. If it is shorted when power is switched on, the module communicates on 00 address with 9600 Bd transfer speed without checksum.
- SD 111** – the command structure corresponds with the ARION communication protocol, which is used among control systems by Amit company.
- SD 112** – the command structure corresponds with the ModBus communication protocol.



## DECLARATION, CERTIFICATES, CALIBRATION


**EC Declaration of Conformity** – in accordance with Act No. 22/1997 Coll. as amended for sensors with an digital output.

**Calibration** – we perform standard calibration of resistance temperature sensors in accordance with EN ISO/IEC 17025 standard in the temperature range of the stated type of sensor.


## SPECIFICATIONS

Sensor type	SD 110	SD 111	SD 112
Power supply	10 to 35 V DC (unstabilized) 14 to 24 V AC		
Power consumption	max. 1000 mW		
Measuring range	-30 to 70 °C		
Standard stem length	25 mm		
Communication properties	communication via RS 485, maximum segment length is 1200 m, asynchronous transfer		
	transfer speeds 1200, 2400, 4800, 9600, 19200 Bd	transfer speeds 9600, 19200, 38400, 57600 Bd – DIP switch	preset transfer speed 9600 Bd optional transfer speeds 1200, 2400, 4800, 19200, 57600, 115200 Bd – DIP switch
	256 modules / 1 serial port	63 modules / 1 serial port	247 modules / 1 serial port
	protocol consistent with ADAM modules	protocol ARION	protocol ModBus 1 stop bit, without parity
Accuracy of electronics	0.05 %		
Accuracy of sensing element	± 0.5 °C		
Resolution	0.01 °C		
Ingress protection	IP 65 according to EN 60 529		
Material of the sensor stem	stainless steel 1.4301		
Material of the enclosure	POLYAMID		
Working conditions	ambient temperature: -30 to 70 °C		
	relative humidity: max. 85 % (at the ambient temperature 25 °C)		
	atmospheric pressure: 87 to 107 kPa		
Weight	0.2 kg		

## WIRING DIAGRAM

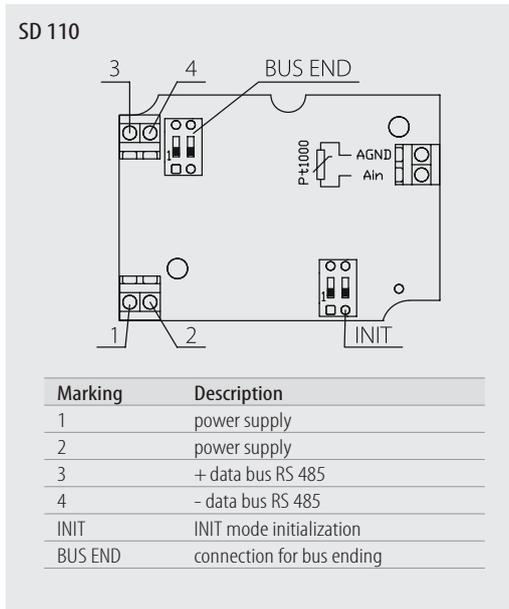

## DIMENSIONAL DRAFT

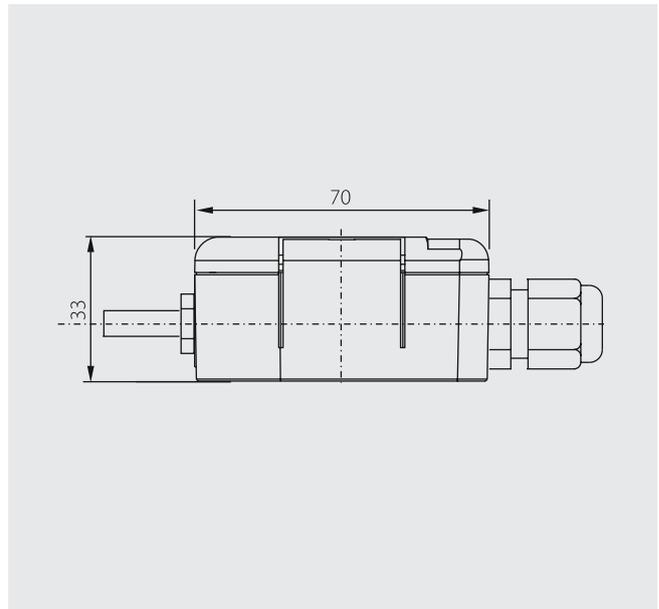

## SENSOR INSTALLATION AND MAINTENANCE

Before connecting the supply lead-in cable, lift off the lid of the plastic enclosure by means of a flat screwdriver. The lead-in cable is connected to the terminals according to the wiring diagram through the loosened grommet. The recommended wire cross section is 0.35 to 1.5 mm<sup>2</sup>, the outer diameter of the circular cross-section cable can range between 4 and 8 mm. To ensure the ingress protection value of IP 65, the grommet has to be tightened and the lid has to be put on after connecting the lead-in cable.

In case the lead-in cable is laid in the vicinity of high voltage conductors or those supplying equipment creating disturbing electromagnetic field (e.g. inductive load equipment), a shielded cable should be used. After installing and connecting the sensor to the sequential evaluating electrical equipment the sensor is ready to use. The sensor does not require any special servicing or maintenance. The device can be operated in any working position, but the grommet must not be directed upwards.