Switch-Tek[™] LU10

Ultrasonic Liquid Level Switch



Application

CSA approved for use in hazardous locations, the intrinsically safe ultrasonic level switch provides high or low liquid level detection of chemical, solvent or low viscosity petroleum based liquids with a 1A relay output. Media examples include hydrochloric acid, acetone and diesel fuel oil. The submersible PP or PFA level switch sensor is universally mounted through the tank wall or inside the tank, and connected to a PLC or relay controller.

Features

- CSA approved intrinsically safe for use in hazardous environments
- Submersible polypropylene or PFA Teflon® sensor and cable for corrosive liquids
- 60VA SPST relay selectable NO or NC via power supply wiring polarity
- Compatible with Smart Trak and Switch-Pak installation fittings



Key Benefits

- Ideal for use as a high or low level switch in classified applications
- Well suited for use in highly corrosive liquids

Compatible Products



LC4X



SWITCH-PRO™

Remote Level Controller

The general purpose remote level controller is offered in three configurations for pump and valve control. The LC40 accepts one level sensor input and provides one 10A relay. The LC41 accepts two level sensor inputs and provides one latching 10A relay for automatic fill or empty control. The LC42 accepts three level sensor inputs with one latching 10A relay output for automatic fill or empty control, and a second non-latching 10A relay for high or low level alarm. For field mount installation, add a single or dual indicator NEMA box.

SWITCH-PRO™

Compact Level Controller

The general purpose compact level controller is offered in two configurations for pump and valve control. The LC10 accepts one level sensor input and provides one 16A relay for high level control or low level control. The LC11 accepts two level sensor inputs and provides one latching 16A relay for automatic fill or empty control. The optional flash alarm brings attention to alarm conditions. Package this level controller with our liquid level switch sensors and fittings.

Switch-Tek[™] LU10


Ultrasonic Liquid Level Switch



Specifications

Orientation:	Universal
Accuracy:	± 1mm in water
Repeatibility:	± 0.5mm in water
Supply voltage:	12-36 VDC
Consumption:	25 mA maximum
Contact type:	(1) SPST relay
Contact rating:	GP: 60 VA
	IS: 32 VDC @ 0.5A
Contact output:	Selectable NO / NC
Process temp.:	F: -40° to 176°
	C: -40° to 80°
Pressure:	150 psi (10 bar) @
	25° C, derated @ 1.667
	psi (0.113 bar) per °C
	above 25° C
Sensor rating:	-1XX5: NEMA 6 (IP68)
	-2XX5: NEMA 4X (IP65)
Sensor material:	-1XX5: PP
	-2XX5: PFA
Cable jack. mat.:	-1XX5: PP
	-2XX5: PFA
Cable type:	4-conductor, shielded, #22
	AWG
Cable length:	10' (3m)
Process mount:	3/4" NPT (3/4"" G / Rp)
Mount. gasket:	Viton®
Classification:	Intrinsically safe
Certificate:	CSA, LR 79326
Compliance:	CE
Approvals:	Class I, Groups A, B, C
	& D; Class II, Groups E,
	F & G; Class III
Parameters:	Vmax = 32V, Imax = 300
	mA, $Pmax = 1.3W$,
	Ci = 0 μ F, Li = 0 μ H

Dimensions

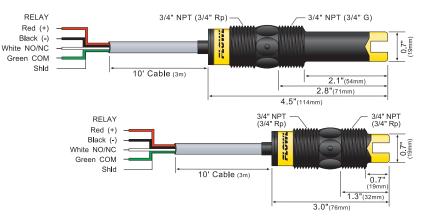

DESCRIPTION

Fittings

D/N

P/N	DESCRIPTION
Switch-Pak™ Fitting Components	
LM45-7001	2" NPT plug fitting, 3/4" NPT nipple, PVC
LM45-1001	2" NPT plug fitting, 3/4" NPT nipple, PP
LM45-5001	2" NPT plug fitting, 3/4" NPT nipple, PVDF
Smart Trak™ Fitting Components	
LM10-1201	2' track, 2" NPT plug fitting, 3/4" NPT nipple, PP
LM10-1401	4' track, 2" NPT plug fitting, 3/4" NPT nipple, PP
LM10-1601	6' track, 2" NPT plug fitting, 3/4" NPT nipple, PP
LM10-1801	8' track, 2" NPT plug fitting, 3/4" NPT nipple, PP
LM10-1001	10' track, 2" NPT plug fitting, 3/4" NPT nipple, PP
LM10-1101	1m track, 2" NPT plug fitting, 3/4" NPT nipple, PP
LM10-1301	2m track, 2" NPT plug fitting, 3/4" NPT nipple, PP
LM10-1701	3m track, 2" NPT plug fitting, 3/4" NPT nipple, PP
Smart Trak™ Level Switch Car Kit	
	Switch-Pak™ F LM45-7001 LM45-1001 LM45-5001 Smart Trak™ F LM10-1201 LM10-1401 LM10-1601 LM10-1801 LM10-1001 LM10-1101 LM10-1301 LM10-1701

LM30-1001Level switch car kit, 3/4" NPT, PPLM30-1061Level switch car kit, 3/4" Rp, PP

NOTES

5

To special order a 25' (7.6m) or 50' (15.2 m) level sensor cable, place the cable length at the end of the part number (ie: LU10-1305-25'). For PP, add \$30 for 25' (7.6m) or \$60 for 50' (15.2m) to the price. For PFA, add \$200 for 25' (7.6m) or \$400 for 50' (15.2m) to the price.

2) The short Metric level sensor has conical Rp threads on both sides of the wrench flat. The long Metric level sensor has straight G threads on the sensing side and conical Rp threads on the cable side of the wrench flat.

Ordering SENSOR MATERIAL (1) -

LU10 -

1 PP

- **2** PFA
- SENSOR LENGTH -
 - 3 Short
 - 4 Long
- PROCESS MOUNT (2)
 - 0 NPT (US)
 - 2 G / Rp (Metric)