




ATEX APPROVED SERIES 2000 MAGNEHELIC® DIFFERENTIAL PRESSURE GAGE Magnehelic® Gage in Flame-Proof ATEX Enclosure



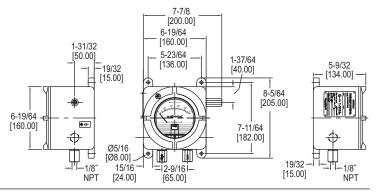

The popular Series AT22000 ATEX Approved Series 2000 Magnehelic® Differential Pressure Gage is now available in a flame-proof ATEX enclosure with the new ATEX approved AT22000 Series. This gage can indicate positive, negative or differential pressures and is accurate within 2%.

FEATURES/BENEFITS

- ATEX housing provides all the capabilities and value of the Magnehelic® in a flame & explosion proof enclosure
- Quick response to pressure changes means no delay in assessing critical situations
 Durable and rugged housing and high-quality components combined provides long-service life and minimized down-time
- High impact strength and high temperature rated for applications where hazardous environments exist

APPLICATIONS

- · Fan and blower pressures
- · Filter resistance
- Air velocity
- Furnace draft
- Liquid levels with bubbler systems
 Pressure in fluid amplifier or fluidic systems

Attention: Check local safety rules and warnings on unit and manual for a correct use of the instrument in hazardous area.

RANGE CHART										
Model	Range in w.c.	Model	Range in w.c.	Model	Range in w.c.					
2000-00N	.05 to 0 to .2	2006	0 to 6.0	2040	0 to 40					
2000-00	0 to .25	2008	0 to 8.0	2050	0 to 50					
2000-0	0 to .50	2010	0 to 10	2060	0 to 60					
2001	0 to 1.0	2012	0 to 12	2080	0 to 80					
2002	0 to 2.0	2015	0 to 15	2100	0 to 100					
2003	0 to 3.0	2020	0 to 20	2120	0 to 120					
2004	0 to 4.0	2025	0 to 25	2150	0 to 150					
2005	0 to 5.0	2030	0 to 30	2160	0 to 160					

SPECIFICATIONS

Service: Air and non-combustible, compatible gases.

Wetted Materials: Consult factory.

Magnehelic® Housing: Die cast aluminum case & bezel with acrylic cover; Exterior finish is coated gray to withstand 168 hour salt spray corrosion test.

Housing Material: Aluminum.

Finishing: Texture epoxy coat RAL7038.

Accuracy: ±2% of FS (±3% on -0, -100PA, -125PA, -10MM and ±4% on -00, -60PA,

-6MM ranges), throughout range at 70°F (21.1°C).

Pressure Limits: -20 in Hg to 15 psig (-0.677 bar to 1.034 bar); MP option; 35 psig

(2.41 bar), HP option; 80 psig (5.52 bar).

Overpressure: Relief plug opens at approximately 25 psig (1.72 bar), standard

gages only.

Temperature Limits: 20 to 140°F (-6.67 to 60°C); Low temperature option: -20°F (-28.8°C); Case: -76 to 140°F (-60 to 60°C) (Note: Product temperature limits are less than case limits)

Mounting Orientation: Diaphragm in vertical position.

Enclosure Rating: IP66. IP65 with option OPV, overpressure relief valve. Process Connections: 1/8" NPT female brass (SS optional). In presence of acetylene it is necessary to use SS.

Weight: 8.6 lb (3.9 kg).

ATEX Approved Product from Comhas with ECN: BVI 14ATEX0072.

Agency Approvals: CE 1370 ⟨Ex⟩ II2 GD Ex d IIC Gb T6; -60°C ≤ Ta ≤ +60°C Ex tb IIIC Db T 85°C.

MODEL CHART													
Example	AT2	2001	-X	X	-A	0	1	X	T2	AT22001-XX-AO1XT2			
Housing	AT2									ATEX approved Series 2000 Magnehelic® differential pressure gage			
Range		2XXX								Specify range by using Magnehelic® model number. See range chart.			
Pressure			Х							Standard from -20 in Hg to 15 psig static pressure			
Rating			MP							Medium pressure-max. static 35 psig			
			HP							High pressure-max. static 80 psig			
Temperature				Х						Standard temperature limits -6.67 to 60°C			
Rating				LT						Low temperature limit to -28.8°C			
Housing Material					Α					Aluminum			
Cover						0				Glass cover			
Process							1			1/8" NPT female brass ports			
Connection							2			1/8" NPT female SS ports			
Overpressure								Χ		Standard without overpressure relief valve			
Plug								OPV		Overpressure relief valve			
										Material same as ports			
Tag									T2	SS information label			
For other engineering unit ranges contact the factory.													

USA: California Proposition 65

△WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

Over Protection Note: See page 21 (Series 2000)